

These instructions are written for qualified and experienced personnel. Please study them carefully before starting any work. Any liability or responsibility for the results of improper or unsafe installation practices is disclaimed. Please respect valid environmental regulations for assembly and waste disposal. Always make sure to use appropriate personal protection!

TRIM-SET-H12-001



TRIM-SET-H78-001 TRIM-SET-H114-001



TRIM-SET-H58-001




Safety precaution:
 Sharp blade – Risk of injury
 Protective gloves required

Additional tools



Rip tool HTRT-1-000


Place knife at corrugation top 1a

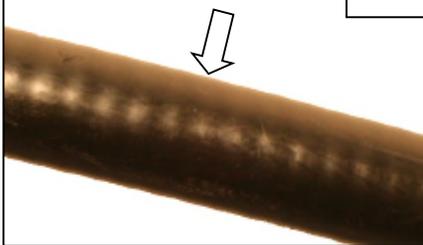


1b



1c

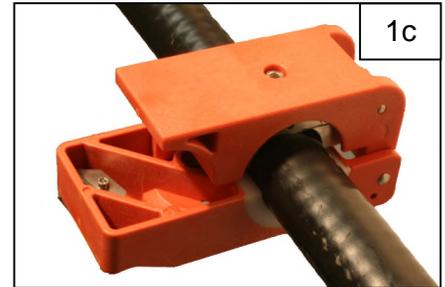


2

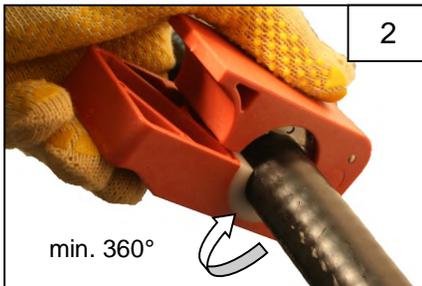


min. 360°


3

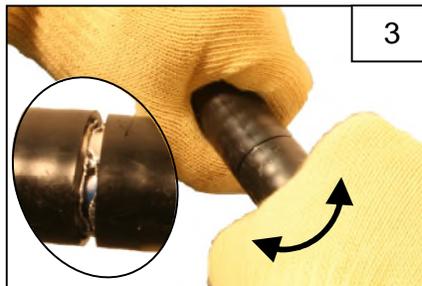


4a

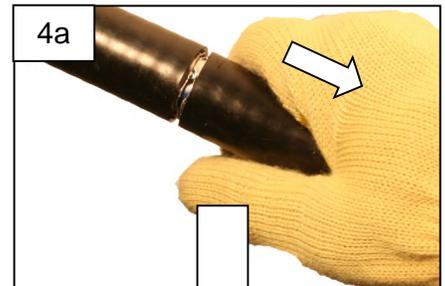


4b

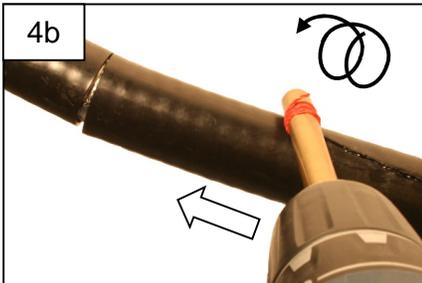

4b

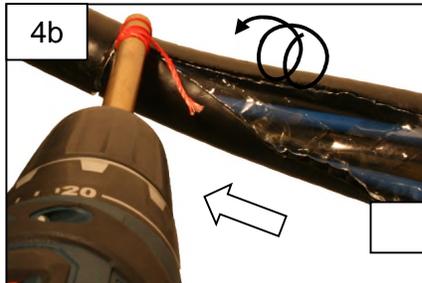

5

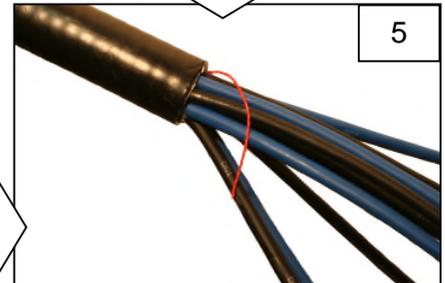

1. Place the tool in a position where the knife is placed at the corrugation top.
2. Turn the TRIM-SET-H tool at least 360° in a clockwise direction (as indicated by the arrow on the tool).
3. After removing of tool, bend the loose end of cable carefully back and forth to break the aluminum armor.
4. Depending on the amount of over length
 - a. Pull up to 2m of jacket and armor carefully over inner cables
 - b. For lengths bigger then 1m use the rip cord.
5. Now the inner cables are accessible.

