

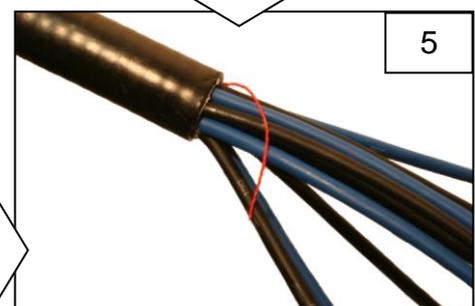
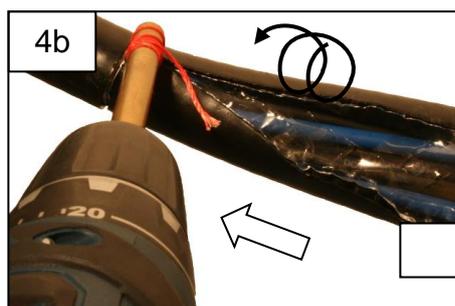
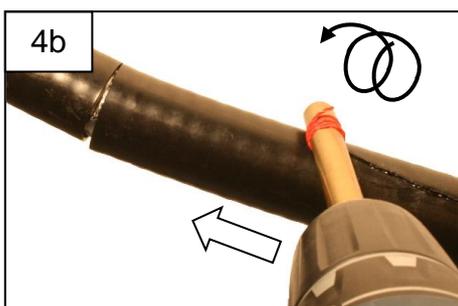
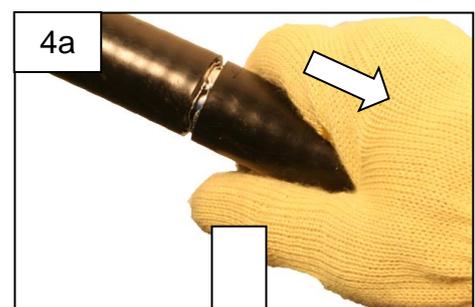
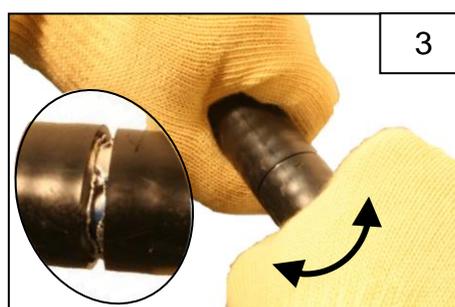


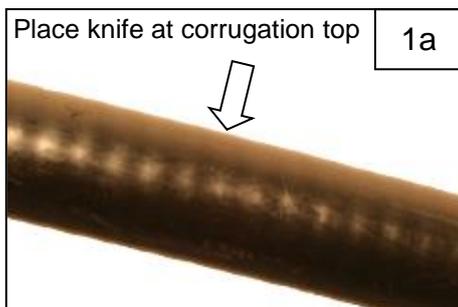

HYBRIFLEX® Cable

Instruction
10000031682-00
TRIM-SET-H114-158
Trimming Tool HYBRIFLEX™ 114/ 158

These instructions are written for qualified and experienced personnel. Please study them carefully before starting any work. Any liability or responsibility for the results of improper or unsafe installation practices is disclaimed. Please respect valid environmental regulations for assembly and waste disposal. Always make sure to use appropriate personal protection!

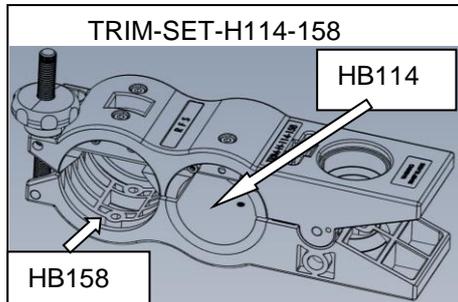

- Place the tool in a position where the knife is placed at the corrugation top, lock the tool by turning the thread lever until it stops and tighten the knob.
- Turn the TRIM-SET-H tool several turns in a clockwise or counterclockwise direction and tighten the knob when it becomes loose. Keep repeating until the armor splits.
- After removing the tool, bend the loose end of cable back and forth carefully to break the aluminum armor.
- Depending on the amount of over length:
 - Pull up to 1 ft of jacket and armor carefully over inner cables
 - For lengths bigger than 1 ft use the rip cord.
- Now the inner cables are accessible.

