

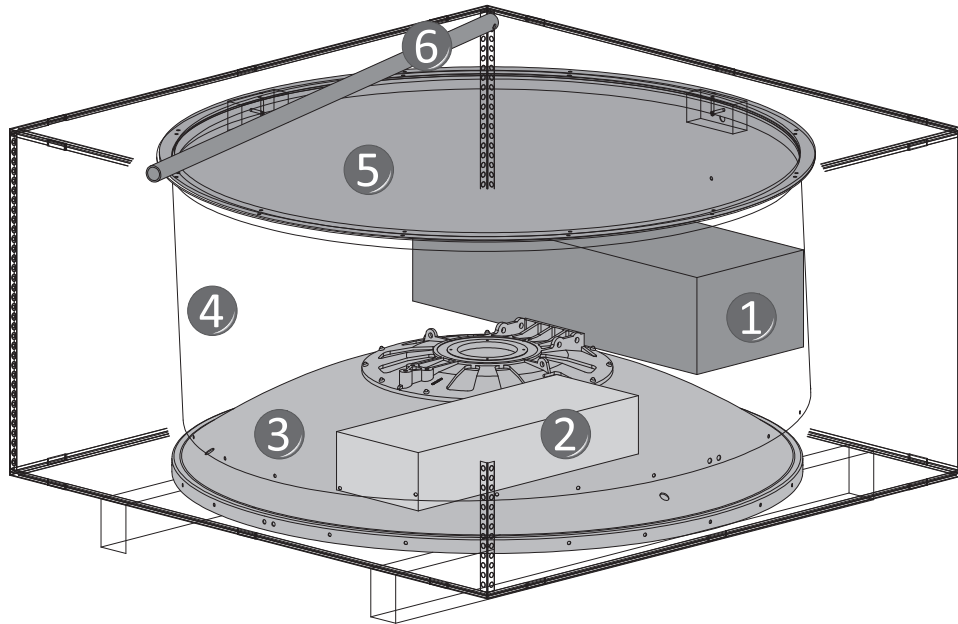




PACKING 4FT Installation Instruction

DA, UA, SU, DAX, UDA, UXA, SUX



Required tools







Grease (provided by RFS)

It is important to mount the antenna exactly as described in this installation instruction.
The installed antenna shall be inspected once per year by qualified personnel.
RFS disclaims any responsibility for the result of improper or unsafe installation.
This installation instruction has been written for qualified, skilled personnel.

We reserve the right to alter details, especially with respect to technical improvement

PACKING 4FT Installation Instruction

DA, UA, SU, DAX, UDA, UXA, SUX

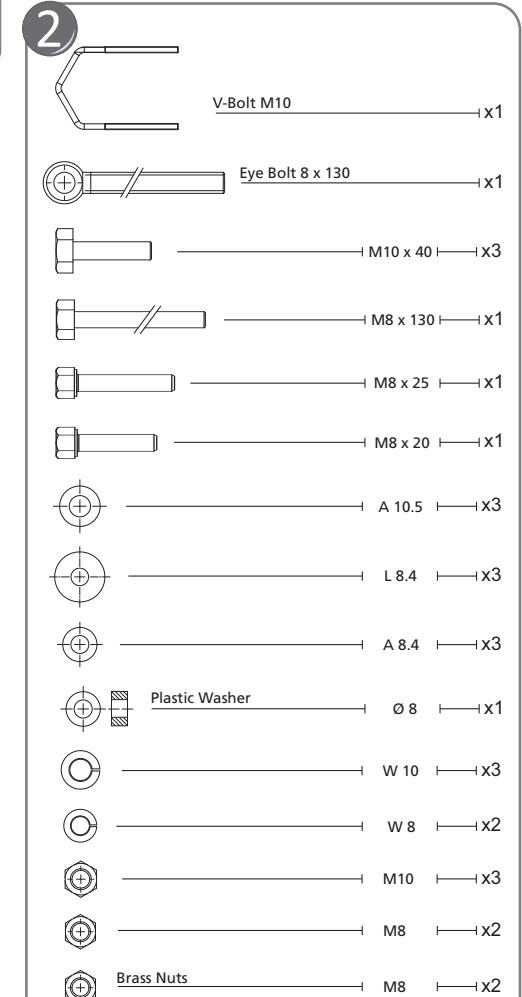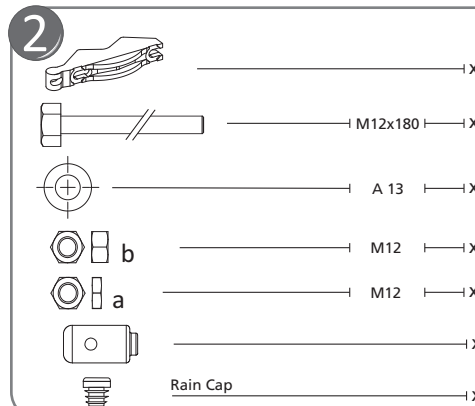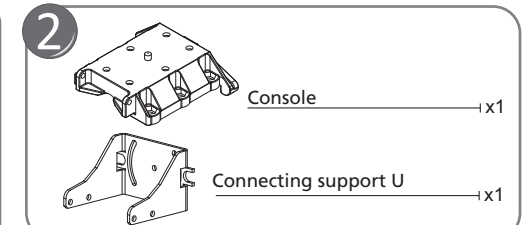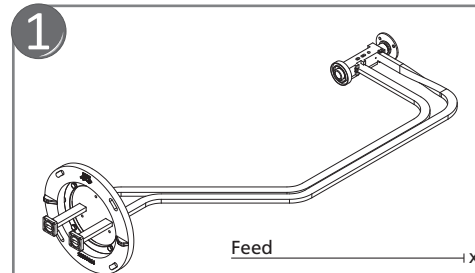

PACKING 4FT Installation Instruction

DA, UA, SU, DAX, UDA, UXA, SUX

3 / 8




PACKING 4FT Installation Instruction

DA, UA, SU, DAX, UDA, UXA, SUX



4 / 8




2

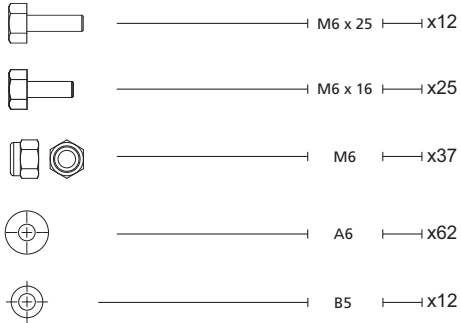


2

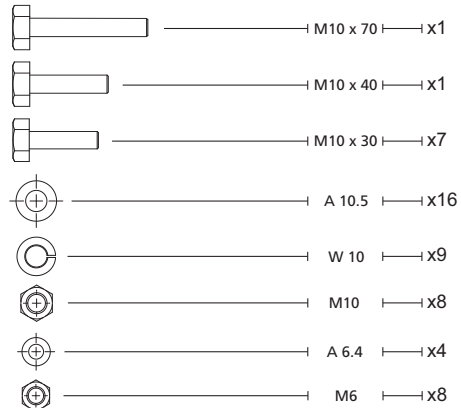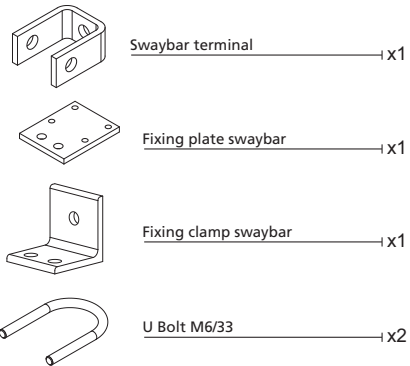


3

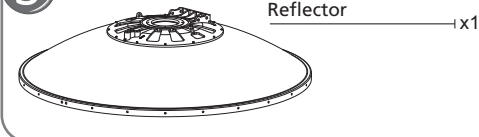


4

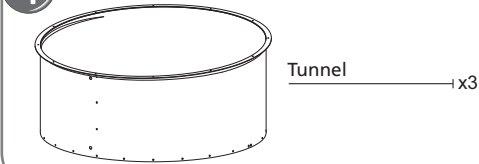


5



6

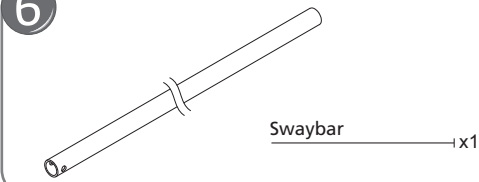

Generic View (Standard Radio Interface)

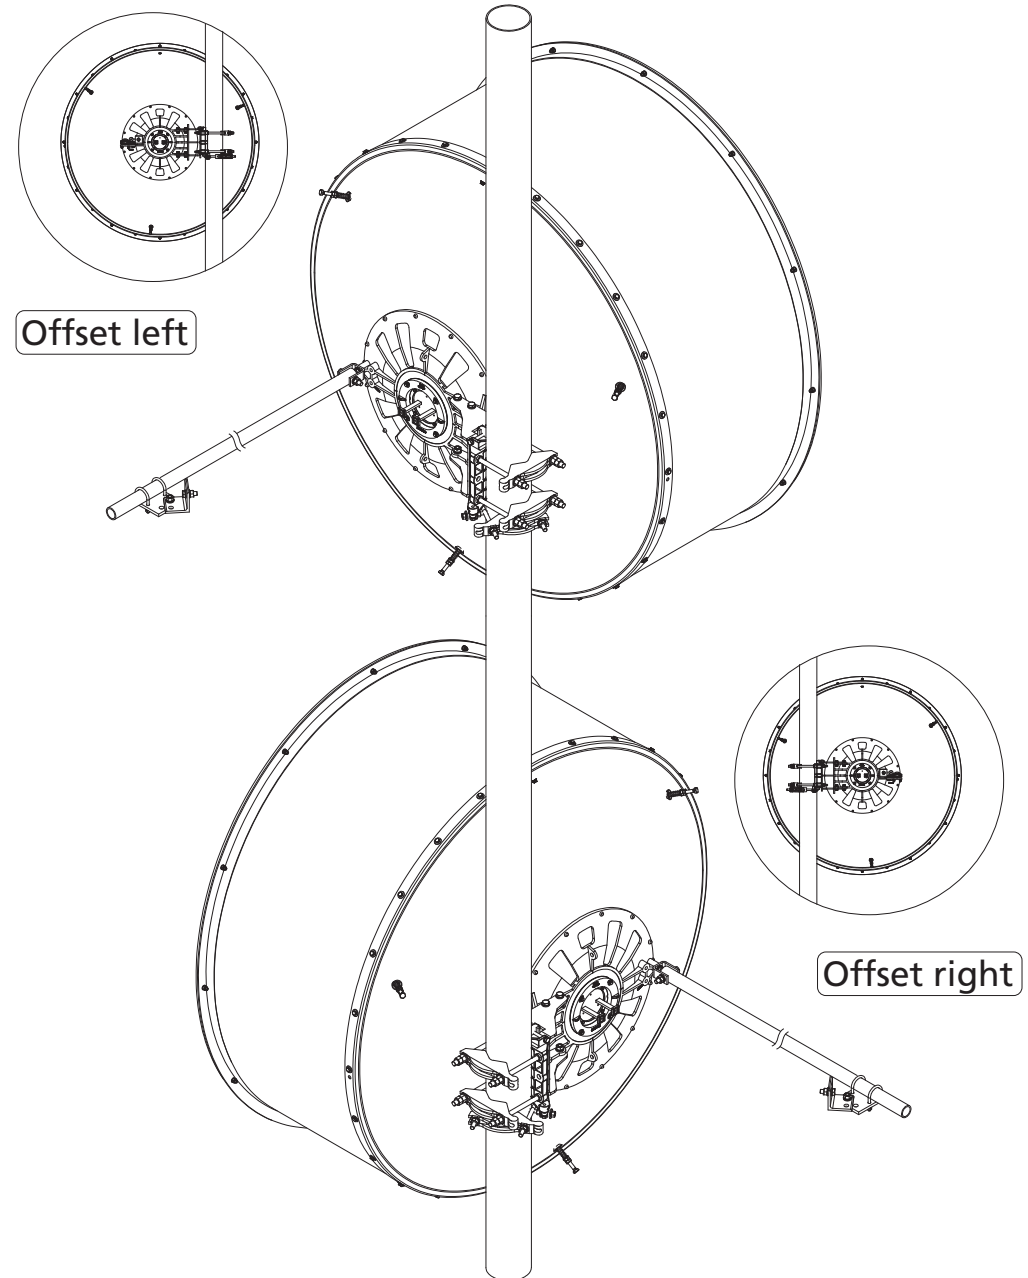




1


Working at ground




~~Working
on Pylon~~

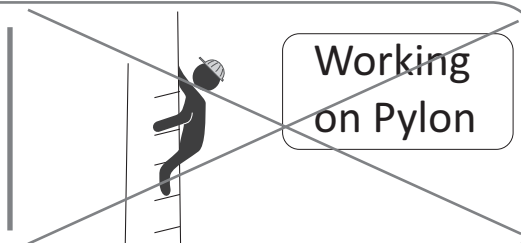

2

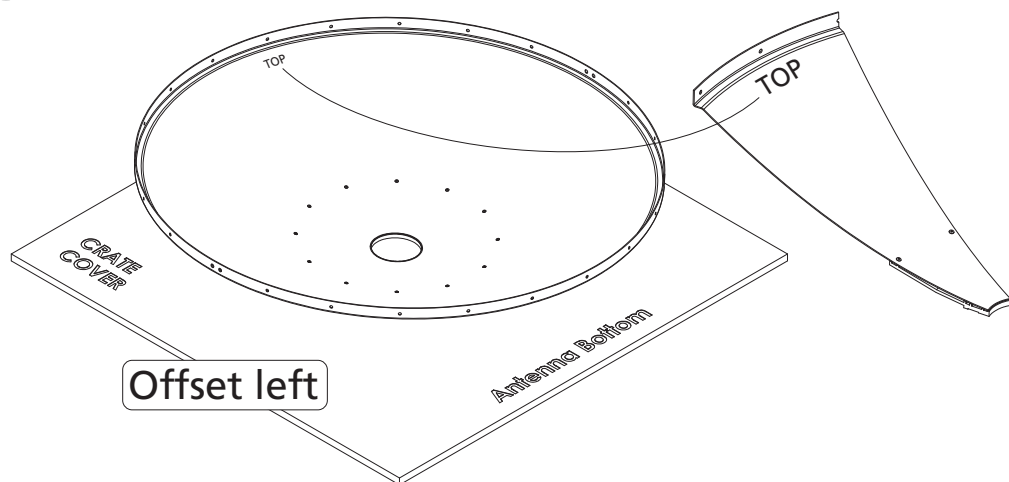


Offset left

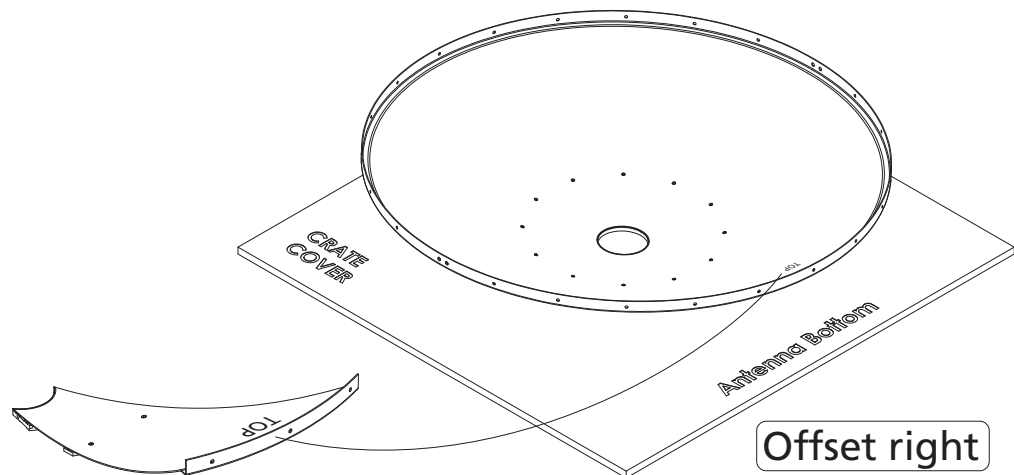

Offset right


3

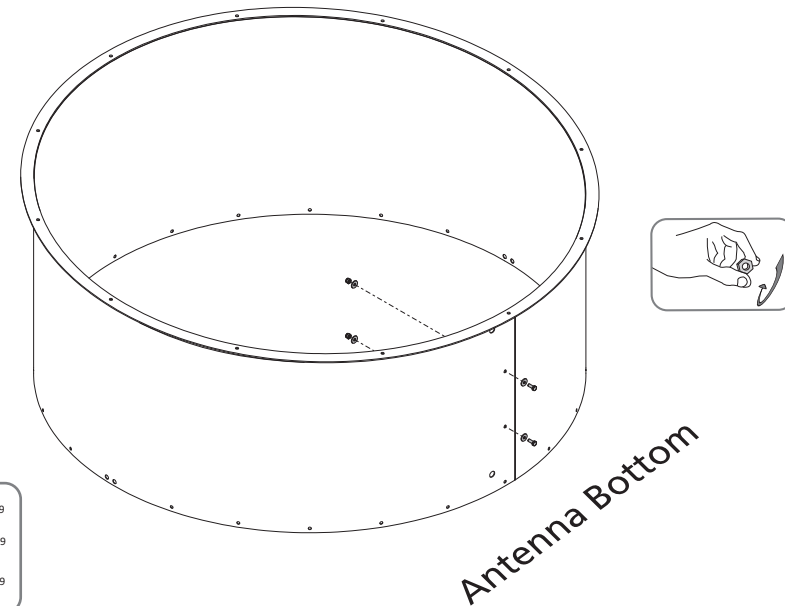

	M5x12	X 9
	M5	X 9
	A5.3	X 9




Antenna Bottom

4

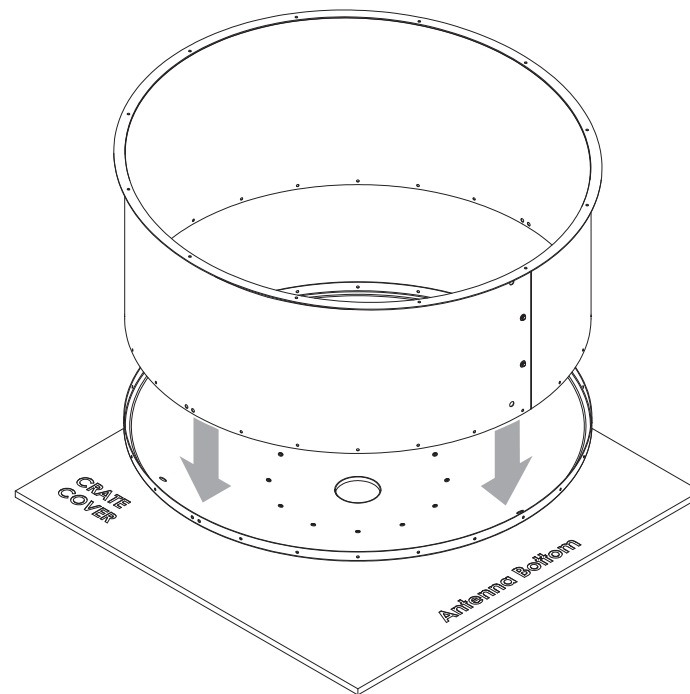


5

Screw tightening following the sequence : Step 1 then Step 2

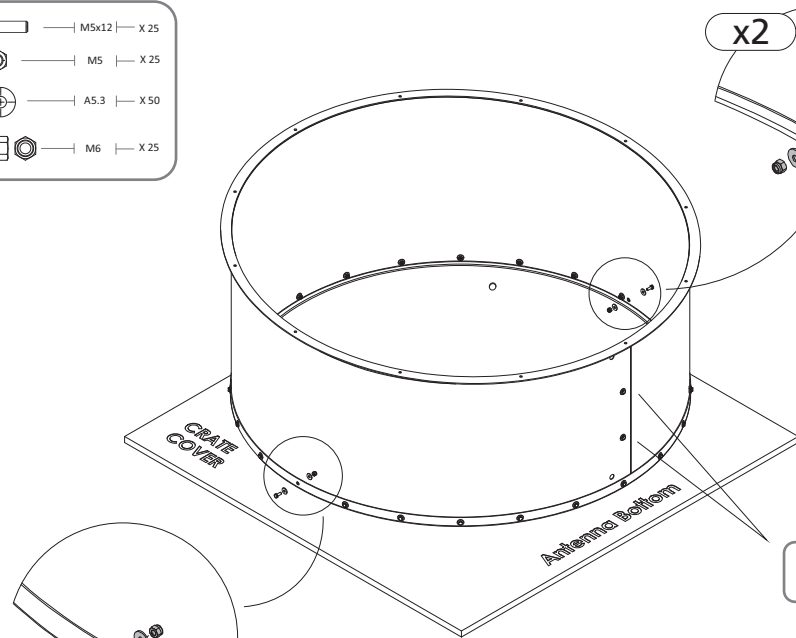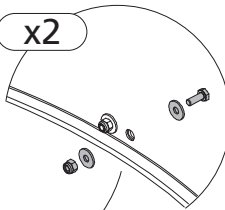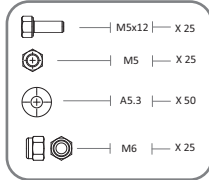



Step 2



Step 1

6

Refer to the feed installation instruction

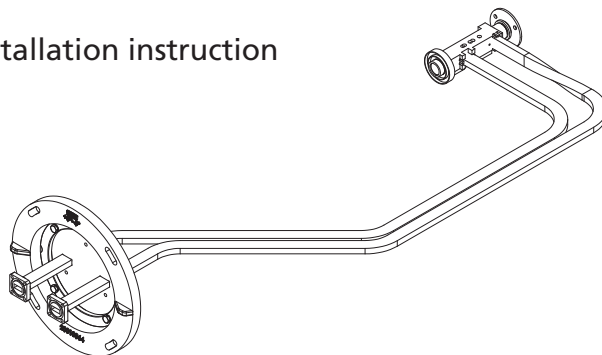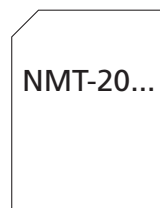

The feed has to be inserted with care to avoid any shock and damage

7

